# **TF228WN Digital Thermostat**

220 VAC, Fan Coil Control

#### SPECIFICATION DATA



## **Features**

- Memorized time off
- Cycle Per Hour (CPH)
- Random startup
- LCD display with simple user interface
- Room temperature or setpoint temperature display selectable
- Manual or automatic fan speed selectable
- Temperature units in either °C or °F
- User setting can be stored with power loss
- Freeze protection available
- Four keypad lock options
- Heating and cooling setpoint limitation
- Flush mount on standard 86 wall mounting box

#### General

The TF228WN digital thermostat is designed for 3-speed fan and valve control in a fan coil system, including:

- 2-pipe cool only/heat only/manual changeover
- Ventilation mode
- Manual or automatic 3-speed fan control
- Water valve control

Besides the basic controls, TF228WN featuring **CPH** (**Cycle Per Hour**) better maintains the room temperature to the setpoint and **memorized time off function** can automatically turn off the thermostat to save energy.

In addition, Honeywell **Random start-up function** would help to maintain power grid stability.

# **Specifications**

Power supply 220(+10%,-15%)VAC, 50Hz

Control PI, On/off output

Accuracy ±1°C at 21°C

Rating capacity 3A for fan load,

2A for zone valve

Protection class IP20
Set point range  $10 \sim 32^{\circ}\text{C}$ Display range  $0 \sim 37^{\circ}\text{C}$ Ambient operating limits  $0 \sim +49^{\circ}\text{C}$ 

Ambient storage limits

Humidity limits 5~90% RH, non-condensing


-30 ~ +49°C

**Table 1. Model Selection** 


Model Number	Backlight	Application	Power supply	Ventilation Mode	Automatic Fan	Packing
TF228WN	White	2-pipe FCU	220 Vac, 50Hz	Y	Y	bulk packing
TF228WN/U	White	2-pipe FCU	220 Vac, 50Hz	Y	Y	unit packing

## **Product Design**

#### **Thermostat Appearance**

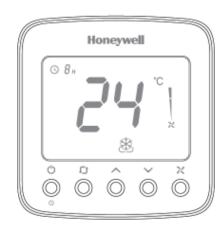

## **LCD Display**

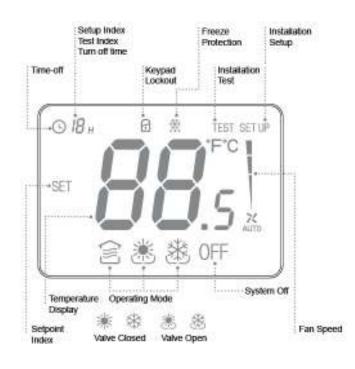

#### **Function**

#### **Valve Control**

Thermostat measures the room temperature via integrated sensor and maintains the setpoint by delivering on/off valve control command outputs.

The fan setting can be selected as manual or automatic 3-speed operation. When in "manual" mode, the fan is switched to the selected speed via control output FH (high), FM (Medium), FL (Low).

While in "automatic" mode, fan speed depends on the difference between room temperature and setpoint. When room temperature reaches the setpoint, the valve will be closed, and the fan will be closed in the meanwhile.

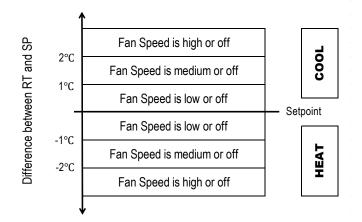


Fig. 1. Fan Speed Ramping Control Algorithm

#### **Temperature Display**

The displayed temperature can be set to room temperature or setpoint. The setting can be changed during ISU (Installation Set Up) process.

# Cycle Per Hour (CPH)

In order to achieve more accurate temperature control, the CPH function enables the thermostat to open the valve several times per hour as the room temperature gets close to the sepoint.

The value can be changed in the ISU, but the default values are 4 for heating and 3 for cooling.

#### **Memorized Time Off**

The time off feature will automatically turn off the thermostat after a selectable amount of time. To change the time setting, press and hold the power button for more than 3 seconds and press "up" and "down" button to change the value when the thermostat is working .

**NOTE:** The setting range is from 0 to 12 hours. The step is 1 hour and the default value is 0.




### **Backlight**

To turn on the backlight, press any key. The backlight will timeout 8 seconds after the last key is pressed. When in ISU and Installation test mode, the backlight will timeout 60 seconds after the last key is pressed.

## **Keypad Lockout**

Keypad lockout can be set in ISU and the default status is "all keys available". Keypad lock can be optioned to "mode button locked", "Fan and mode buttons locked", "all buttons (except power button) locked" and "all buttons locked".

# **Dimensions (mm)**

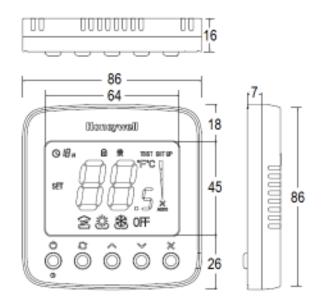

# **Operating Mode**

#### **Comfort Mode**

In comfort mode, the setpoint can be changed by pressing up and down button. Applications include cool only, heat only and manual heat/cool changeover.



#### **Ventilation Mode**

Press mode button to enter "ventilation" mode. In "ventilation" mode, no output for valve while the fan will operate at selected fan speed.



#### **Freeze Protection Mode**

Freeze protection can be selected as disabled (default) or enabled in the ISU. In freeze protection mode (only in heating applications), when thermostat is off and the temperature is below 6  $^\circ\!\mathbb{C}$ , the thermostat will activate heating mode until the temperature rises to 8  $^\circ\!\mathbb{C}$ .



# Wiring

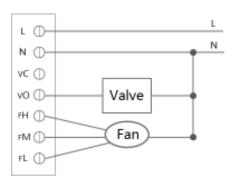


Fig. 2. Honeywell VC4013/VN4013/VS4016 Wiring

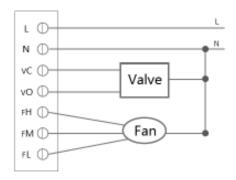


Fig. 3. Honeywell VC6013/VN6013 Wiring

# **Terminal Designations**

Item	Terminal	Description		
1	L	220VAC live wire		
2	N	220VAC neutral wire		
3	vC	Heating / Cooling valve close		
4	vO	Heating / Cooling valve open		
5	FΗ	High speed fan		
6	FM	Medium speed fan		
7	FL	Low speed fan		

# **Trouble Shooting Tips**

If	Then
Heating system does not respond	<ul> <li>Set the mode to heating by pressing the mode button.</li> <li>Make sure the temperature is set above the room temperature.</li> <li>Make sure "heat on" icon shows on the display.</li> <li>Wait 5 minutes for the system to respond.</li> </ul>
Cooling system does not respond	<ul> <li>Set the mode to cooling by pressing the mode button.</li> <li>Make sure the temperature is set below the room temperature.</li> <li>Make sure "cool on" icon shows on the display.</li> <li>Wait 5 minutes for the system to respond.</li> </ul>
The fan doesn't work	<ul> <li>Make sure fan mode isn't set to auto.</li> <li>Check heating or cooling system works well.</li> </ul>
The mode or fan button doesn't work	<ul><li>Make sure keypad is unlocked.</li><li>Check that thermostat is on.</li></ul>
The up or down button doesn't work	<ul> <li>Make sure keypad is unlocked.</li> <li>Make sure the system doesn't work in ventilation mode.</li> <li>Check that thermostat is on.</li> </ul>
The system turns off automatically	Make sure the memorized time off value isn't set to "0".

# **Honeywell**

#### **Automation and Control Solutions**

Honeywell Environmental and Combustion Controls (Tian Jin) Co., Ltd No. 158, NanHai Road Tianjin Economic-Technological Development Area Tianjin, 300457, P.R.C.

Subject to change without notice.